

# Moon Patrol High Score Save Kit



## Installation Instructions


# Step 1

Remove the PCB from the cabinet



## Step 2


Using pliers, pinch the pcb spacers and remove the sound board from the stack

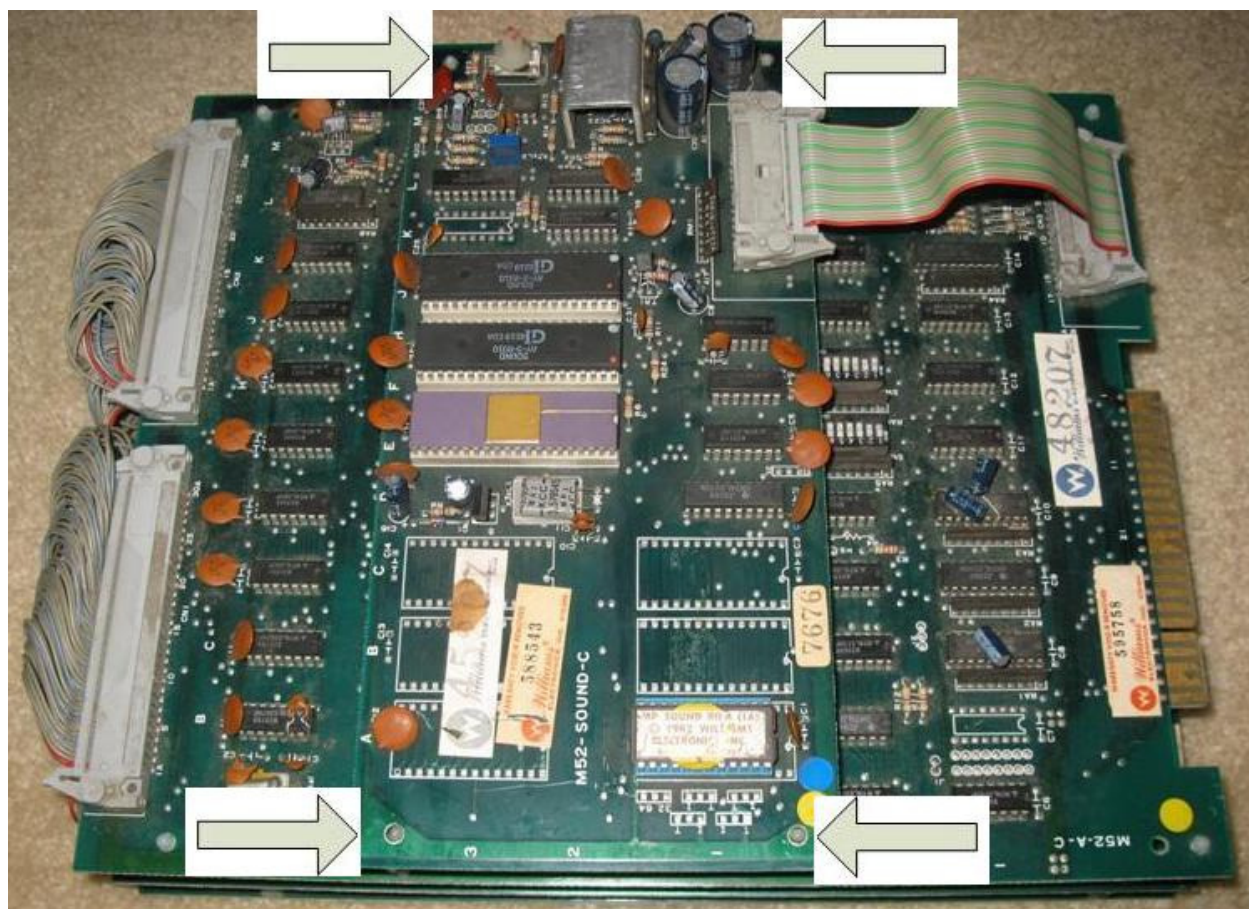




## Step 3

Locate and remove eproms mpa-1w.3m, mpa-2w.3l, mpa-3w.3k and mpa-4w.3j and the z80

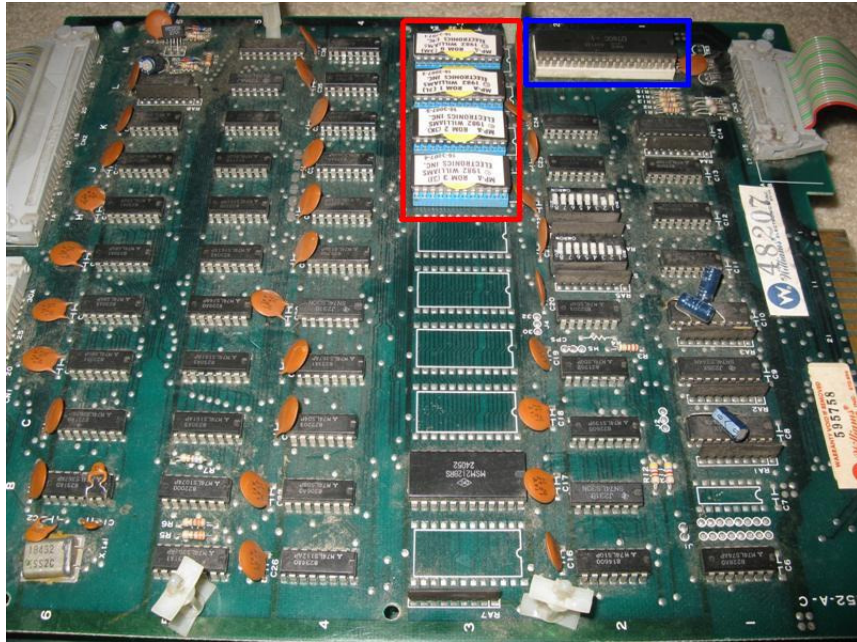

## After Removal

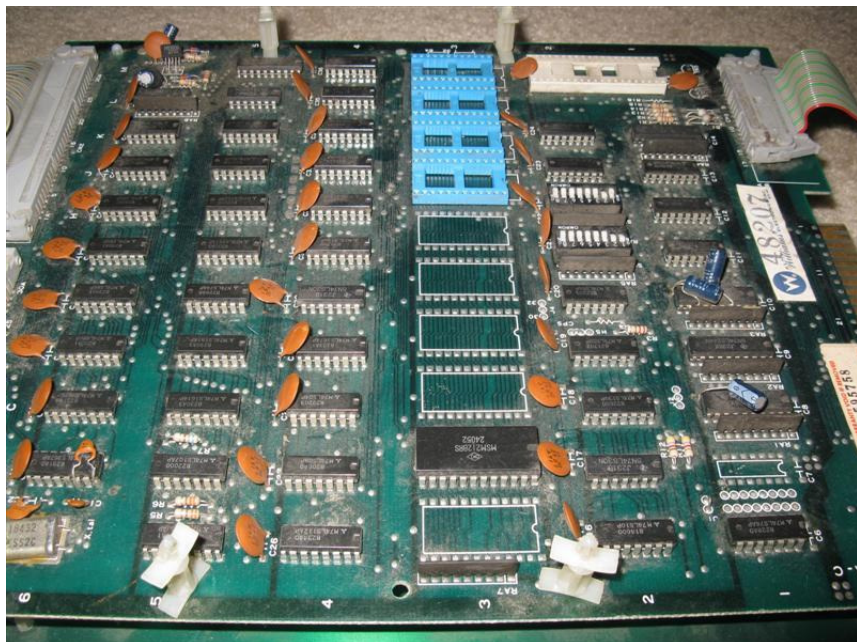

## Step 4

Place the z80 on to the HSS Kit. Make sure no pins get bent and the notch is facing the correct direction



## Step 5

Place the HSS kit into the empty z80 socket.

It should look like the picture below.





## Step 6

Place the sound board back on top of the pcb stack and return back into the cabinet

